

PRESTO[®] mypod[™] refillable coffee holder (model 09402)

Replaces the Philips* Senseo* model HD7810/15,
HD7810/65, and HD7810/75 pod holder.

INSTRUCTIONS

Before using the Presto[®] MyPod[™] refillable coffee holder with your Philips* Senseo* pod coffee maker, be sure the coffee maker is in good working condition.

Important Information

1. Your coffee maker is not designed to brew all grinds of coffee. It is instead designed for use with the pods that accompany the unit. You can enjoy similar results by using a drip coffee maker grind when using the Presto[®] MyPod[™] refillable coffee holder. If you grind your coffee from beans, be sure that the texture feels no coarser than table salt and no finer than sugar. You can tell by the coffee produced if you have the right grind; if too fine, little or no coffee will be dispensed; if too coarse, a weaker than desired brew will be produced.
2. Your coffee maker will dispense more coffee with the Presto[®] MyPod[™] refillable coffee holder than it does when using the pods that accompany the unit. Depending on the size of the cup used, it may overflow.

Note: We recommend that you remain by the coffee maker during the brew cycle. You can stop the flow at any time, by pressing the indicator light button on the coffee maker.

3. When using the Presto[®] MyPod[™] refillable coffee holder, your coffee maker will not produce cr me.

Brewing Coffee

Before first use, wash the coffee scoop, refillable coffee holder, and compacting cover in warm, soapy water. Rinse thoroughly.

1. Place a Presto[®] MyPod[™] coffee filter in the refillable coffee holder. Moisten the filter slightly to prevent slippage inside the holder.
2. Using the coffee scoop (Fig. A), pour 1 to 1½ scoops of ground coffee on the filter in the refillable coffee holder. Use 1 scoop for normal strength coffee and 1½ scoops for stronger coffee. Do not use more than 1½ scoops of coffee.


Using a damp paper towel, brush off any coffee grounds on the rim of the holder before placing the holder in the coffee maker.

Use a drip coffee maker grind NOT an espresso grind of coffee. If you grind your own coffee, it should have a texture which feels no finer than sugar and no coarser than table salt.

3. Position the compacting cover over the coffee grounds so the flat side is facing up (Fig. B) and push it down firmly and completely to compact the coffee grounds. Depress retractable lifting pin before use.
4. Remove the pod holder that came with your Philips* Senseo* pod coffee maker. Replace it with the Presto[®] MyPod[™] refillable coffee holder (Fig. C) and follow the manufacturer's instructions for brewing coffee.



Removing and Cleaning Holder

1. Your Philips* Senseo* coffee maker operates under high pressure. After coffee is done brewing, before opening unit, wait approximately one minute to allow pressure to reduce and excess water to drain through unit. It is normal for a small amount of dripping to occur once the brewing cycle is complete.
2. Slowly open lid on your coffee maker and using the handle, carefully remove the coffee holder from the coffee maker. **Use caution when removing coffee holder from coffee maker as there may still be some hot water/coffee in holder that may drip.** Let coffee holder cool down or run coffee holder under cold water and then lift off compacting cover using the retractable lifting pin (Fig. A). Discard coffee grounds.

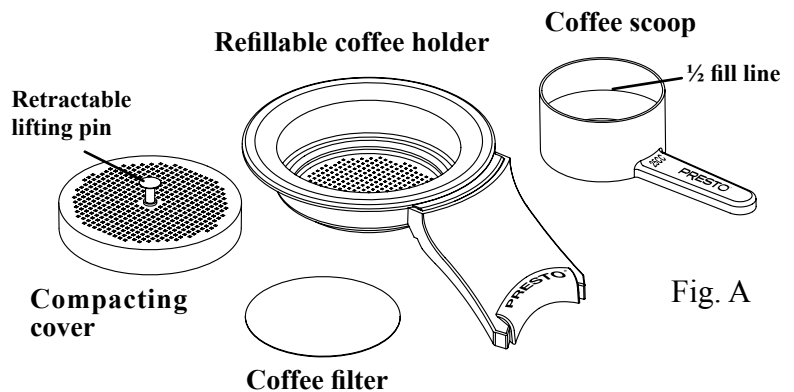

*Senseo and Philips are trademarks of Koninklijke Philips Electronics N.V. LTD. LIAB. CO.
National Presto is not affiliated with that company.

©2006 by NPI, Inc.

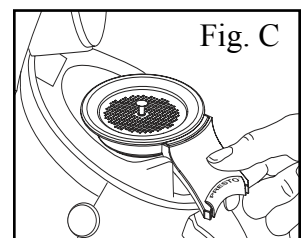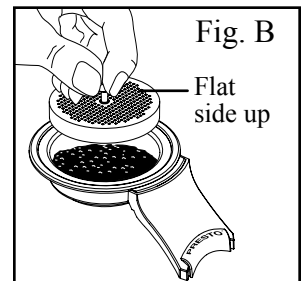

3. Rinse the coffee scoop, refillable coffee holder, and compacting cover in hot water. Occasionally wash parts in warm, soapy water and rinse. If using a dishwasher, place all parts in the utility or utensil basket.

Questions & Answers

I like really strong coffee. How can I make it with the Presto® MyPod™ refillable coffee holder?

Use a finer grind – one having the texture that feels like sugar. When making coffee, use 1½ scoops and press the one cup button rather than the two cup button. If coffee still isn't strong enough, reduce the amount of liquid dispensed by pressing the indicator light button on the coffee maker before the cycle ends.

The cup overflowed and coffee spilled all over the counter. What am I doing wrong?

Your coffee maker is calibrated to push water at a specific pressure through a coffee pod for a specific period of time. Coffee placed in the MyPod™ refillable coffee holder has different flow characteristics than a coffee pod. As a result, more water than is needed to prepare coffee with the MyPod™ holder may be forced through the grounds. It is thus recommended that you remain by the coffee maker during the brew cycle and, if it appears that the cup will overflow, stop the flow of water by pressing the indicator light button.

Minimal or no coffee was dispensed? What is wrong?

The coffee you are using is ground too fine – it is intended for espresso rather than coffee. Your coffee maker does not have enough pressure to force the water through coffee ground so fine. Use a drip coffee maker grind – if you grind your own coffee, the ground texture should feel no finer than sugar and no coarser than table salt.

The coffee maker leaks at the sides behind the spout. How do I get it to stop?

You may be using coffee that has been ground too fine or there may be coffee grounds on the rim of the holder. Use a coarser grind of coffee, one that is no finer than sugar, and be sure to brush off any grounds from the rim of the holder before placing it in the coffee maker.

My coffee contains a lot of sediment. Is this normal?

You may have forgotten to clean the grounds off the rim of the holder after you poured in the ground coffee. Be sure to wipe off the rim before inserting the holder in the coffee maker.

Note: You may see a small amount of very fine sediment at the bottom of the cup. This is normal.

Consumer Service Information

In the event you encounter a problem with the coffee maker, replace the refillable coffee holder with the pod holder that came with your coffee maker and follow the manufacturer's instructions. If the problem persists, it is not due to the Presto® MyPod™ refillable coffee holder. Contact the coffee maker manufacturer.

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, **call our Consumer Service Department** weekdays 8:00 AM to 4:30 PM (Central Time) at **1-800-877-0441** or write:

NATIONAL PRESTO INDUSTRIES, INC.
Consumer Service Department, 3925 N. Hastings Way, Eau Claire, WI 54703-3703

You may also contact us at our website **www.GoPresto.com**. Inquiries will be answered promptly by telephone, letter, or email. When writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning, should be performed by our Factory Service Department. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair. **Send to:**

CANTON SALES AND STORAGE COMPANY
Presto Factory Service Department, 555 Matthews Drive, Canton, MS 39046-0529

PRESTO® Limited Warranty

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping or any failure or defect of an appliance not made by Presto. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the Presto Factory Service Department. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC.
Eau Claire, WI 54703-3703